

# VAV THERMAL DIFFUSERS

## SC TEMPERATURE SCALE

### E/Z TEMPERATURE SCALE

All “Smart” diffusers feature an easy to read room temperature set-point scale. Room temperature adjustments are made by simply turning the VAV room temperature control thermostatic actuator clockwise for a cooler room temperature and counter clockwise for a warmer room temperature. Determine room temperature set-point by aligning the end of the actuator with the indicators on the temperature scale. Each full rotation or each indicator on the temperature scale will equal plus or minus two degrees. For factory setpoint of 74° degrees, turn actuator clockwise to stop, then turn counter clockwise three full turns.



### TEMPERATURE ADJUSTMENT SCALE

Set point range  
70° to 78° degrees.



Each indicator equals 2°

