



## **READ AND SAVE THESE INSTALLATION INSTRUCTIONS**

### **FOR THRUWALL FAN™ Model TW208P**

**WARNING - To Reduce The Risk Of Fire Or Electric Shock,  
Read These Instructions Before Installing Your Thruwall  
TW208P Room To Room Fan.**

This fan is not to be installed in the ceiling or an outside wall.  
This fan is not be used in cooking or damp areas.  
Do not install in fire rated walls.

With the use of any electrical appliance, it is important to observe all basic precautions to minimize the risk associated with use, such as electrical shock, fire, or injury to persons. If you have doubts or are unfamiliar with this type of installation work, seek the services of a qualified electrician. Suncourt assumes no responsibility for installation of the ThruWall Fan. For your safety and protection follow all instructions and adhere to applicable building and/or electrical codes. Not for bathroom use. Do not use in wet locations. Do not use in a window.

### **Warning - To Reduce The Risk Of Fire, Electric Shock Of Injury To Persons, Observe The Following:**

Installation work and electrical wiring must be done by qualified person (s) in accordance with all applicable codes and standards, including fire-rated construction. When cutting or drilling into wall or ceiling, do not damage electrical wiring or other hidden utilities. Prior to installation of the TW208P fan, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

The installation of your ThruWall fan requires that the cutouts must be accurate.  
In the carton you will find:

- (1) Telescoping metal sleeve with plastic grille attached
- (1) Telescoping metal sleeve without grille attached
- (1) Loose grille
- (1) Template
- (7) #6 Screws
- (7) Wall Anchors
- (3) Wire Nuts

## **PLEASE READ THESE INSTRUCTIONS BEFORE STARTING INSTALLATION**

The ThruWall fan moves air from room to room quietly and efficiently. Installs in any frame wall from 3-1/2" to 6-1/2" thick. A high quality Thermally Protected motor with balanced fan blade moves up to 200 CFM. The ThruWall can be mounted in any normal drywall or paneled stud construction wall up to 6-1/2 " maximum total thickness.

Please see the airflow direction label on the housing. The grilles of your ThruWall fan may be painted to suit any decor. Thoroughly wash the grilles with mild household detergent, dry completely, and spray with a quality, fast dry, spray paint.

STEP BY STEP INSTRUCTIONS

## **Operating Instructions:**

The ThruWall is equipped with a variable speed controller. There is a speed adjustment knob on the output side of the fan. Turning the switch to the right will allow you to adjust speed from low to high as you desire. The unit is in the off position when the speed control knob is turned all of the way counter clockwise. Thank you for buying this Suncourt product.